
全国免费服务热线: /National Free Tel 400+6572+609



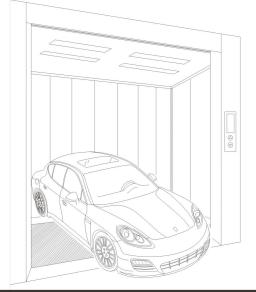





韦伯电梯有限公司 WEIBO ELEVATOR CO.,LTD

© 2018₩ +∓#>>-ышаяшын. Кошасса+,




Excellent Performance Webstar


卓越性能

韦伯特殊优化的专有的服形速度曲线使载货系列电烙在加速、减速时更加平稳。同时减少周间运行时间,提高平层精确。使 货车能率预分便、平稳的进出领围。 韦伯载悠亮列州等从用微机控制系统、流电无触点控制、操作高便、可靠性高;变频载货电梯通过失量变频变压对电梯进行 全师环控制,使电梯运行往前大大提高,并有效降低运行功耗,拥有极优越的性价格比。

The specially optimized and exclusive graph speed curve of WEBSTAR make the machine-noon-less goods elevator run more stable in acceleration as well as deceleration, at the same limit and can reduce the operational time between the floors. With high accuracy-leveling fluction, he were congressive with the contraction of the contractio

 加減速度曲线对比 A comparison of ac erating and decelerating curves

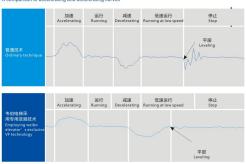

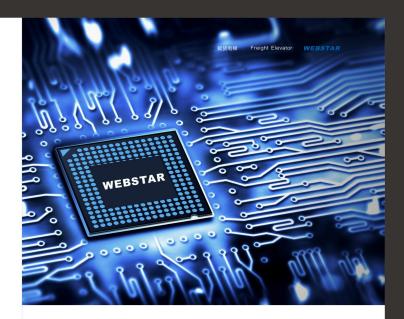

- 先进的全电脑数据网络化
 Advanced Fully Computerized Date Network
- 微电脑信号控制系统
- n Based On Microprocessor
- 数据库管理

先进的控制技术 Advanced Control System





Easy Access

出入自如

为满足用户的不同进也要求,韦伯敏货电路有旁开门,中分双折门,单通门以及双通门四种开门方式供选择,与工厂、仓储、百货商场、物业中心等建筑物的电灵活在配。

●多种开门方式 multiple door ope













采用高强度型材制作而成的轿厢,可承载各种类别的终物



 
开门距大

采用多折式轿厢结构,达到最大开门宽度,便于大体积货物自由进出。



光幕保护

在电梯入口处形成一直通光导保护屏障,对于任何进入其限测范围内的物体都能做出灵敏反应,有效地保护人货安全。 Several protective light curtains are formed at the entrance of the elevator, which sensibly detects and responses to any objects the intrude into the detecting scope. The safety of human and acquess are guranteed.









载货电梯 **Goods Elevator**

韦伯系列载货电梯,为您提供了广泛的载重范围,无论您的载货重量是1000kg还是5000kg,都会以出色的表现,为您创造更多的价值。 韦伯系列载货电转优化设计的预用激动等势,经济实用,具有定能力使快速,安全可靠,运行干除,载重重大等权良品性。在工厂、仓库、商场、购物中心、匿书临等不同用途和环境,均能满足客户的需要,是最佳的货运工具。

WEBSTAR serial goods lift furnishes you with a wide load range from 1000kg to 5000kg, it can always create more and more values for you by its most outstanding performance.

WEBSTAR serial goods lift has the bright, spacous accommission and practical car with the explinate design. It offers the swift and convenient cargo transport it has the superior characteristics such as the fire second; and reliability, amonon number layer loading capacity etc. It is applicable to various applications such as factory, waterbooks, shopping melting from the cargo transport for the reliability amonon on careful adapts and purple for such performance in the first cargo transport for the reliability amonon for inching superiors. It is first cargo transport for the cargo transport for the reliability and the careful and pass study to accommiss programments. It is first cargo transport for the cargo t





调速性能优良





(05/06)

无机房货梯

Machine Roomless Goods Elevator

韦伯无机房货除采用先进的水磁同步无齿轮鬼引技术,因此无需承违装置进而改进了电梯并通内的布局方式,因而无需机房;无 齿轮来引到其重量经。体邦心特别。 更节约了整套空间,太大规商了无机原货格的性能与品质,除在了旋即来。 韦伯元和历货服务结构产增。 经久期用,开门距大、运行平衡安全等优换品性,成为工厂、仓库、百货大厦、物业中心、匿书 馆等单位运输货物的最佳选择。

超大载重量

It improves the rated load of goods lift from 1600kg to 3000kg, which can meet clients' various requirement.









汽车电梯/无机房汽车电梯

Car Elevator/machine Room-less Car Elevator


完美空间 带您进入舒心的汽车搭乘体验。

Wonderful Space
Take you into pleasant car ride experience.

双向操纵 为司机的操作提供使利。 Bidirectional Operation 人性化设计 大大缩短候梯时间。

User-Friendly Design

车伯汽车电梯采用变压变提於射技术,从而避免了国际测受力不均而导致更引系统负载加重生产 的噪音及骄酷抖动,最大程度优化了这一系列产品的特性。可广泛应用于停车场、汽车梯建厂、地下 车库等场所,无机房汽车梯程基格电电梯最简准出地电梯简准进步机等。 其他目的意义或是一角等一节指针的。全是整定"等量是收入,其无途轮到升成长的应用,改变 了传统并遂布周模式,最大程度钓钓了建筑空间,美化了建筑外观,是汽车45店的理想选择。

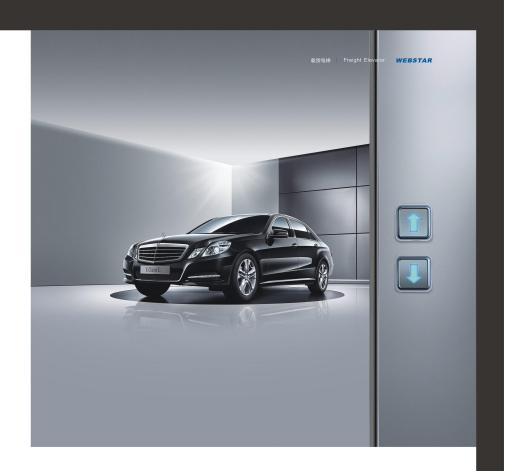



杂物电梯

Dumbwaiter Elevator

韦伯系列杂物电梯采用先进的工业电脑板控制、结构新额、构 通先进具有安全可服。运行等他。拥作方便、特别和汀门采用投议不 特殊规制作。鉴学规则。 广泛运用于货物、短点、往电、银行、等学性、医跳、商贩、工 厂、围中地、实验。即由部门以供送物饮食、每具、日用品、钱 币、文件、商品、货物、图书、校准、合件等贴品之用。













轿厢系列

Car Series



旁开式 (仅供参考,以实物为准) Side opening (This is for reference only, please take actual products as criterion.)



项目 Item	规格 Style
轿顶 Cartop	嗅塑钢板 Powder coating steel
通风 Ventilation	图形风扇 Circular fan
轿壁 Carwall	喷塑钢板 Powder coating steel
新门 Cardoor	噴塑锅板 Powder coating steel
地板 Carfloor	花纹钢板 Chequered plate steel
地坎 Sill	铁 Iron
操纵箱、外呼 Cop.Hop	CZ-HB



双折中分式 (仅供参考,以实物为准)
Double-folded central opening type (This is for reference only



项目 Item	規格 Style
新顶 Cartop	赎塑钢板 Powder coating steel
通风 Ventilation	圆形风扇 Circular fan
轿壁 Carwall	喷塑钢板 Powder coating steel
新门 Cardoor	喷塑钢板 Powder coating steel
挑板 Carfloor	花纹钢板 Chequered plate steel



厅门系列 **Hoist-way Door Series**

● 多式样的层门适应建筑物的多重要求。 Various type of landing doors apply to all various needs of buildings.



操纵盘及外野(标配) Operation panel and outer calling(Standard)

按照人体工程学设计的特别提供器,手感细腻,反应灵敏,操作方便回知;精致的 层站显示器,排除,且建设显示各件数码及符号。 It designs the care operation panel according to the orgonomics principle. If feels the and exquisite with the sensitive reaction, it can be operated at eass. The delicate landing display can clearly and promptly display various numbers and symbols.

采用高强度的型材制作,经久耐用。 It adopts the high strength section material for the manufacture with the fine durability.





載货电梯 | Freight Elevator **WEBSTAR**



CZ-01

喷塑色标(可选) Colours of coating(Options)

色彩丰富,材质考究的轿壁任您自由选择。 Car wall with rich colors and various materials can be ch



图片系电影绘制,可能与实际略有不同。 The pictures are plotted by computer and are likely somewhat different from the actual products.



载货电梯土建图

Goods Elevator Construction Sketch


用户应完成的工作


- 本图按有关电梯技术标准要求绘制,需使用方复 核后作为电梯安装依据。
- 2 机房内通向并道的所有孔洞四周应第一高50mm 以上、宽度适当的台阶。
- 3 曳引机承重梁如需埋入墙内,则支承长度应超过 墙中心20mm,且不应小于75mm。
- 4 安装完成后,地面装饰应与厅门地坎上表面有一 高度适当的台阶,以防止水或其它杂物进入并道。
- 5 安装时浇灌的物体应能满足相关图示要求。 6 缓冲器底座制作时应在安装人员的指导下施工。


THE USER'S TASKS

- If makes the drawing according to the relevant lift technical standard. It needs to be checked and confirmed by the user before it becomes the lift installtion proof.
- It shall build more than 50mm high step with the proper width around the holes that lead to the well in side the machine room.

- 5 The casting object in the installation shall satisfy the relevant drawing requirements.

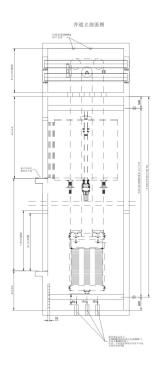

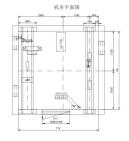

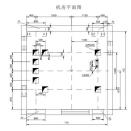

○ 有机房WF30技术参数表

井道平面图

第井級計 甲分級計 3000 3500 2800 3400 差 差 25 25 1500 1500 4500 4500 2500 2500 4 4

(17/18)

无机房货梯土建图


Machine Room Less Goods Elevator Construction Sketch

用户应完成的工作

- 1 本图按有关电梯技术标准要求绘制,需使用方复 核后作为电梯安装依据。
- 2 机房内通向并道的所有孔洞四周应第一高50mm 以上、宽度适当的台阶。
- 3 曳引机承重梁如需埋入墙内,则支承长度应超过 墙中心20mm,且不应小于75mm。
- 4 安装完成后,地面装饰应与厅门地坎上表面有一 高度适当的台阶,以防止水或其它杂物进入井道。
- 5 安装时浇灌的物体应能满足相关图示要求。
- 6 缓冲器底座制作时应在安装人员的指导下施工。

THE USER'S TASKS

- 1 If makes the drawing according to the relevant lift technical standard. It needs to be checked and confirmed by the user before it becomes the lift installtion proof.
- It shall build more than 50mm high step with the proper width around the holes that lead to the well in side the machine room.
- The casting object in the installation shall satisfy the relevant drawing requirements.
- 6 The buffer base shall be made under the directions of the installer.

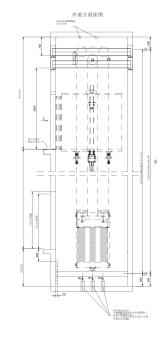

裁货电梯 | Freight Elevator WEBSTAR

机房平面图 井道平面图

◎ 无机房WFN30技术参数表

载重量(K Loading cap	ig) pacity	2000	3000	5000
额定速度(e Rated spe	n/s) eed	0.5	0.5	0.5
	变 Width	1800	2000	2500
級組尺寸(mm) Car size	课 Depth	2300	2900	3600
	高 Height	2200	2200	2400
HORTown) Door opening size	变 Widh	1500	1800	2500
	高 Height	2100	2100	2100
	方式 Mode	左开	双折	双桁
井道尺寸(mm) Hoistway size		2950	3400	4300
	课 Depth	2800	3400	4100
对重位置 Counterweight:	osition	Æ	左	左
最大提升資度 Maxtraveling	E(m) height	25	25	25
意坑深度(m Pit depth		1500	1500	1600
(原居高度(mm) Top floor height		4800	4800	5300
2310		4	4.	4

注:土建及参数表仅供参考。Note:Construction layout and parameters are reference only.



汽车电梯土建图

Automobile Elevator Construction Sketch

WA30

 
用户应完成的工作

- RF に取る場合は1上1 ・ 本限を有効を検索 ・ 出来の表す。 ・ 出来の表す。 ・ 出来の表す。 ・ 出来の表す。 ・ 出来の表す。 ・ 出来の表す。 ・ はました。 ・ はまた。 ・ はまたる。 ・

 
THE USER'S TASKS


- It makes the drawing according to the relevant lift technical standard. It needs to be checked and confirmed by the user before it becomes the lift installition process.

 It shall build more than 50mm high step with the proper width around the holes that lead to the well in side the machine room.







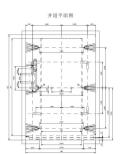

○ 有机房WA30技术参数表

	载重量(K Loading cap	g) sacity	3000	5000
	穩定速度(n Rated spe	n/s) red	0.5	0.5
		克 Width	2500	3000
	数据尺寸(mm) Car size	深 Depth	6000	7000
主参数 Main specifications		A Height	2200	2400
		支 Width	2500	3000
	#/1R*t(mm) Door opening size	高 Heght	2100	2100
		方式 Mode	双折	双折
	井道尺寸(mm)	¥ Width	4300	4900
	Hoistway size	課 Depth	6500	7500
	对重位置 Counterweight p	osition	左	左
	最大提升高度 Max.traveling	(m) teight	25	25
	B抗深度(m Pit depth	m)	1600	1600
	原用高度(m Top floor he	m) ght	4800	4800
	机房高度(m Machine room	m) height	2500	2500
	鬼別比 Roping		4	4

注:土建及参数表仅供参考。Note:Construction layout and parameters are reference only.



汽车电梯土建图

Automobile Elevator Construction Sketch


WAN30


用户应完成的工作


THE USER'S TASKS

- It makes the drawing according to the relevant lift technical standard. It needs to be checked and confirmed by the user before it becomes the lift installition proof. It shall build more than 50mm high step with the proper width around the holes that lead to the well in side the machine room.
- machine room.

  3 When the traction machine supporting beam is embedded in the well, then the supporting beam length should exceed the center of wall more than 20thm, and the embedded land center of wall more than 20thm, and the embedded langth include more part of the supporting beam length should exceed a rope of the state of t



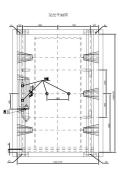

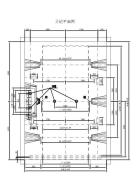

裁货电梯 | Freight Elevator WEBSTAR

○ 无机房WAN30技术参数表

AUT	OMOBILE EL	LEVA	TOR CONSTRUCTION SKETCH	
	载重量(Kg) Loading capacity		3000	5000
	额定速度(n Rated spe		0.5	0.5
	新順尺寸(mm) Car size	支 Width	2500	3000
		Desch	6000	7000
		高 Height	2200	2400
主参	FITIR trimmij Door opening size	茂 Width	2500	3000
数			2100	2100
Main		方式 Mode	中分双折	中分双折
n spe	井道尺寸(mm) Hoistway size		4500	5000
specifications		∰ Depth	6500	7500
tions	対策位置 Counterweight position		左	左
	最大提升高度(m) Max.traxelling height		25	25
	底纹深度(mm) Pit depth		1600	1600
	及是高度(mm) Top foor height		5100	5800
	机房高速(mm) Machine room height		老	老
	包引比 Roping		4	4

注:土建及参数表仅供参考。Note:Construction layout and parameters are reference only.

Function Table

名称 Name	电梯动作说明 Lift actuation description	备注
检修运行 Overhaul operation	当电梯进入检修状态时,所谓以检修速度(小于0.63m/s),通动运行。 If the elevator enters overhaul state,the car box will be in inching-running at the overhaul speed(below 0.63m/s).	0 🗆
自动运行(无司机) Automatic operation (without operator)	电梯在无人提控的情况下,按照录客给出的指令自动完成关门,启动、停车,开门等动作,将货物送至目的地。 Under attendant-free state, the elevator will make automatic door-closing, start, stopping and door-opening as per the passenger's command and send commodity to the destinations.	00
有司机运行 Operation by operator	电接由司机运行器位,司机抵照乘各要求,给出内选和关门指令,电梯按指令要求接向目的地。 If the elevator is manipulated by an operator, the operator shall according to passangers requirement give internal—and observiousing command and the elevator runs to the desired destination.	0 🗆
上电自动开门 Upper automatic door-opening	每次电梯上电,忽略施正好在门区,杨门的自动打开。 If the elevator is energized when the Car box is just at the door area, the car door will automatically open.	0 🗆
本展呼梯开门 Call for opening of this floor	如电梯未启泊自门已关上城正在关闭,技术届好移按阻,斩门自动打开。 in case that the elevator's yet not statrate but the door is closed or is being closed,pressing the call button of this floor will make the door automatically open.	0 🗆
防夹人装置 Clamp protection device	关门时安全被板成光幕动作,关门动作马上停止,重新开门以防止夹入。 If the safety touch board or optical screen actuates during door-closing, the door-closing operation will immediately slop and the door will be re-closed after reprining.	0 🗆
漢载直設 Full-load direct running	漢数字电路只确位内语,不确应分等。 Under full-load_the elevator merely responses to the internal selections and responses to no external call.	00
超载停驶 Overload stopping	电梯温载,则电梯门打开,超载打秀,蜂科摄响,操纵盘振声 "OVER LOOL"。 In cass of overload,the elevator running state, direction ,floor,load,car door and troubles.	0.
运行状态显示 Display of running	是示电梯运行状态、方向、梯层、等门、负载、故障等值等。 It displays the elevator running state, direction, floor, load, car door and troubles.	00
门联锁保护 Door interlock protection	全部门联锁部符合,电梯力能运行,各别,电梯将停止运行。 Only when all doors are interfocked and closed may the elevator be able to run,otherwise it will stop.	00
抱網检測保护 Brake checking protection	通过指向网络逊开关对相间的打开与闭合实对监视。 当期间未按要求打开时,系统将像止电梯启动。 The detection switch of brake arm makes a real-line inspection of open only closing of the brake. If the brake arm fails to open sper requirements, the system unit prevent the develop from start.	0 🗆
端站接速保护 Terminal station speed-change protection	电接在运行中检测转输站开关后,将强迫减速并自动校正接是显示。 If the elevator datects a terminal switch during running, it will be forced to decelerate and meanwhile automatically correct the floor elevation.	0 🗆
限位保护 Position-Limit protection	电梯上(下)运行检测到限位开关动作后,将立刻停止(下)运行。 If the elevator detects a limit switch, the entire system during upwards(downwards) running, it will immediately stop.	00
极限保护 Limit protection	电路运行返视跟开关边作员,整个系统将立即停电。 If the elevator runs to trigger a limit switch,the entire system will be immediately do-energized.	0 🗆
驻停 Halt	关闭电影后根据进入技师状态,电梯不再响应任何分呼,然所登记的功能服务完毕后自边原因根据。 After closing of electrical lock, the elevator will enter the parking state, response no external calls, automatically return to the locked floor after completing all registernal selections and show the parking "zt"	0 🗆

名称 Name	电梯动作说明 Lift actuation description	备注
安全阻路保护 Safe loop protection	安全回路照开,电梯将立刻伸止进行。 Once the safety circuit breaks, the elevator immediately stops. () □ ☆	0 🗆
照明自动关闭 Automatic lighting OFF	规定时间内电梯无人使用,新闻内照明和风廊将自动关闭,以节能。 The to-be-dispalyed characters (Figures and English letters) for each floor may be freely preset through LCD.	0 🗆
重复关门 Main contactor	执行关门指令信,规定时间外门锁回路不通,电梯机不会得开门,行修。 After if executes the open-shul instructions, if the door lock loop is not connected within the stipulated period, the lift will not re-open the door. It awards the regair very soon.	0 🗆
不停居任意设置 Arbitrary setup of a skip floor	该功能可使电缆用产级报票客任意设定不停库站。 This function makes the users freely preset the non-stop floors.	0 🗆
待梯层任意设置 Arbitrary setup of a protection	电移在自动状态,一定时间为无召唤服务,电梯自动运行制约命指达。 If under the automatic mode there is no called services in a specified time, the elevator will automatically runt to the stant-by floor.	0 🗆
楼层显示可设定 Setup of floor indication available	可根据用户需要控制显示字等(英文、数字)。 It can have the characters such as English, numers otc. Made to order according to the user's specific needs.	0 🗆
应急辩明 Emergency lighting	傳电影,系统称自动打开铭内应急限制。 In case of power failure, the system will automatically turn on the emergency lighting inside the car box.	0 🗆
五方通话 Five-party communication	通过对讲机、桥内乘客可与机房(控制版)、大楼框理中心人员对范取调查记、 The passenger in the car box may talk with personnel in the machine room(contor panel) or building management center though an interphone.	
远程监控 Remote monitoring	通过有线或无线通讯模块,可以对电梯运行状态进行实时指控。 With wired or wireless telecommunications modules, the running state of elevator may be under real-time monitoring.	ж
假通门控制 Control of going-through door	通过对贯通门模式的设置,可控制费通门在相应格层的开、关功作。 Though presetting of penetration-door mode, the penetration door may be controlled to open or close at corre sponding floor.	×
消防返回 Firefight return	当场等并关闭仓后,系统进入场险运行状态。电极取消所有过效。被问场防能处停靠,自动开门,并间周数 控制中心检验局限设备程 . When the first prevention swicth is closed, the system will enter the fire-pervention running state, under which the elevator cancels all calls, runs to and stops at the fire-prevention floor, automatically opens the door, and transmitts fire protection links see issnals to the fire-prevention floor, automatically spens the door, and transmitts fire protection links see issnals to the fire-prevention and control center.	0 🗆

以上功能同样适用于汽车梯 This function list is also applicable to Car Lift

 O为标配功能
 △为变接货格功能
 □为改建货格功能
 米为选配功能

 O Standard functions
 ☆ Function of frequency controlled freight elevators
 □Function of double-speed elevators
 ※Optional functions



致力于为客户提供尽善尽美的运载服务



科技启迪上下,专业保障安全。 Enlightened by technology, Profession guarantees safety